




# Casio Cassiopeia E-125 Key Pad Replacement

This guide will show you how to replace the key pad.

Written By: Ryan Fernandez

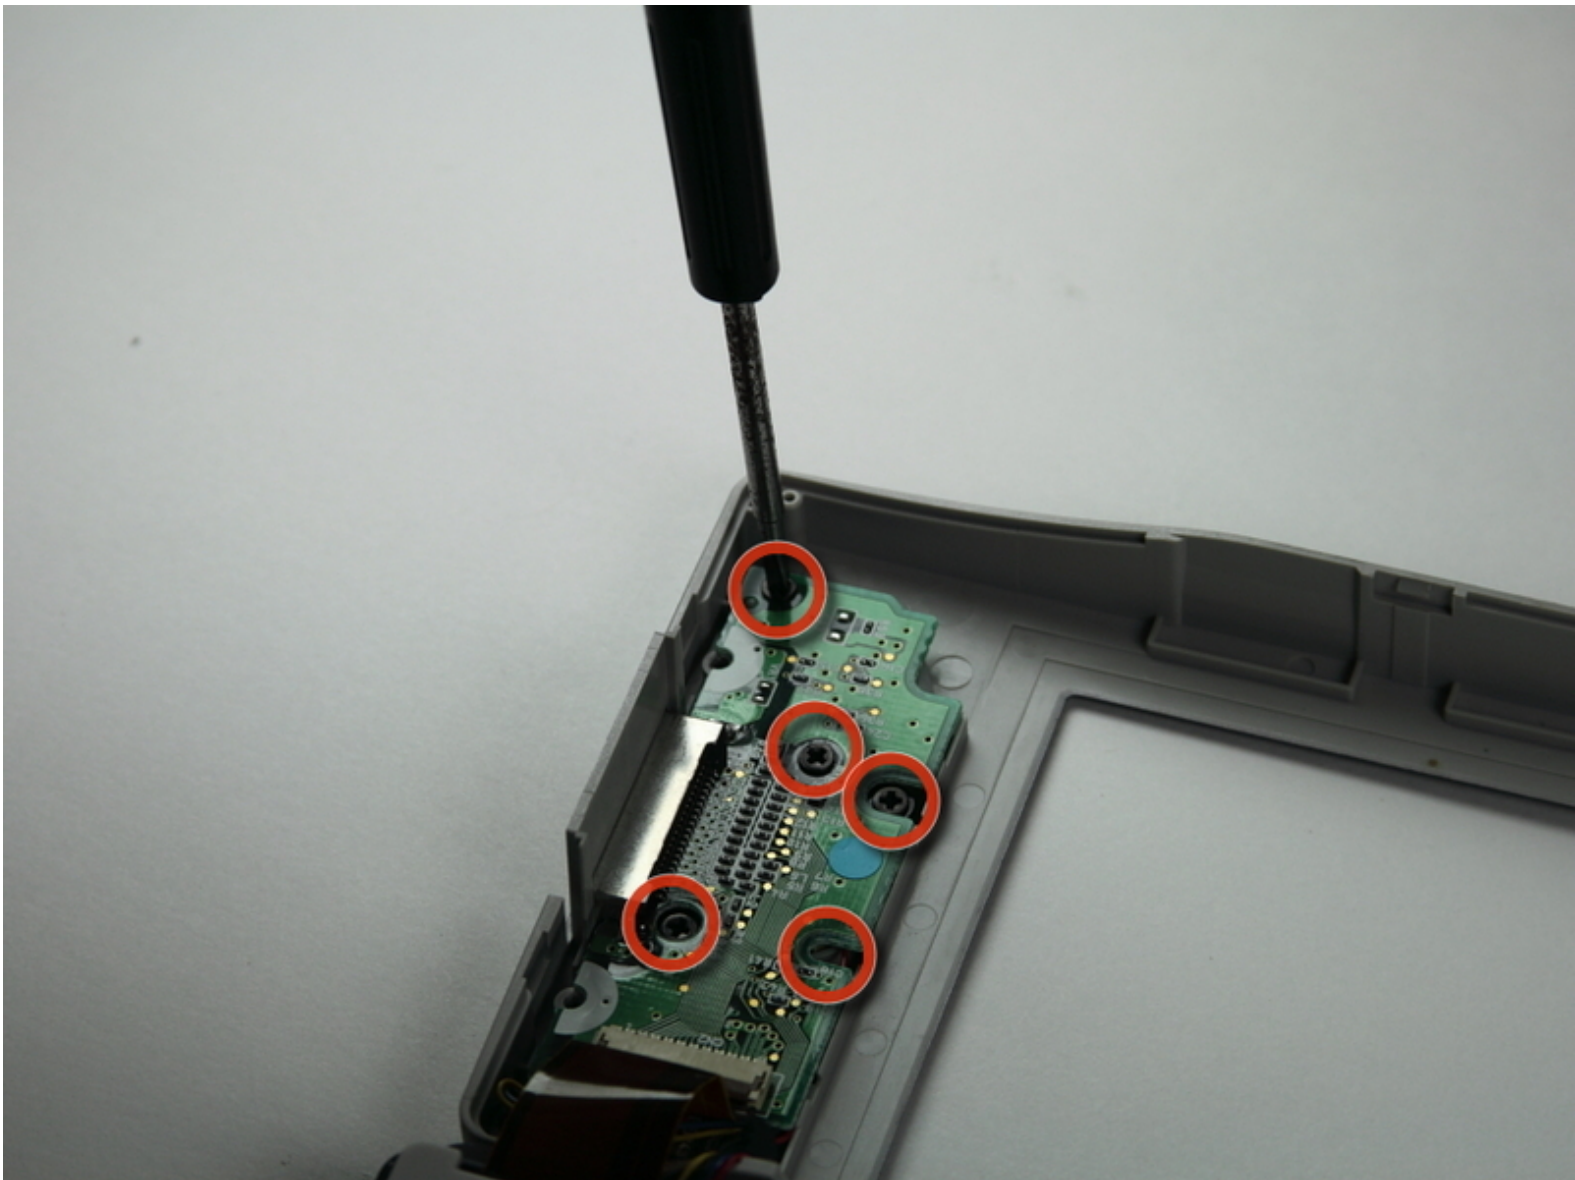



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

## Step 1 — Battery



- Flip the device over to the back side.

## Step 2



- Slide the small switch on the back to "MAIN".

### Step 3



- Slide the battery cover downwards.
- Pull off the battery cover.

### Step 4



- Pull the black tab to remove the battery.




## Step 5 — Touch Screen



- Using the Phillips #00 screwdriver, remove the two screws near the top of the device.

## Step 6

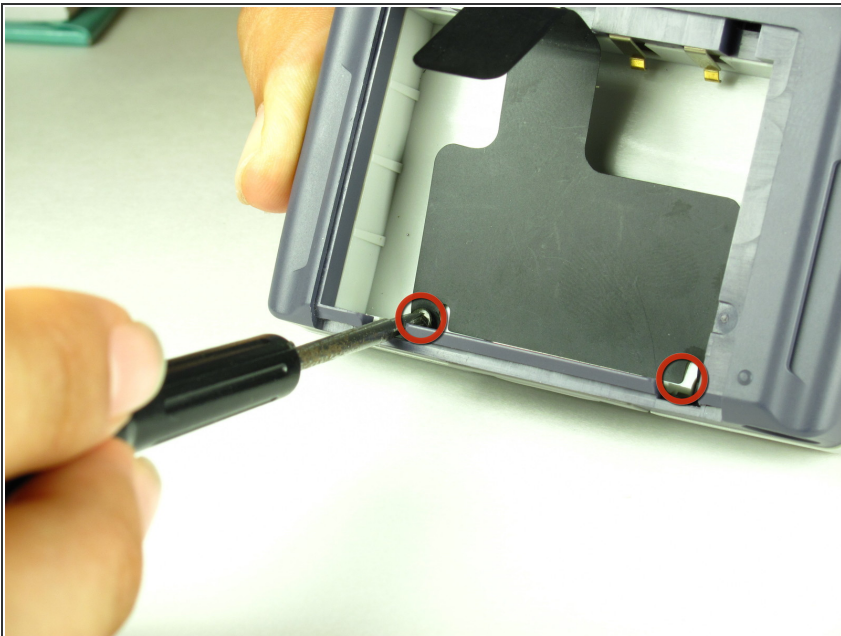


- Using the Phillips #00 screwdriver, remove the two screws located inside the battery compartment.

## Step 7




- Partially separate the two halves of the case by inserting the tip of a small flat head screw driver into the space between the halves.

## Step 8

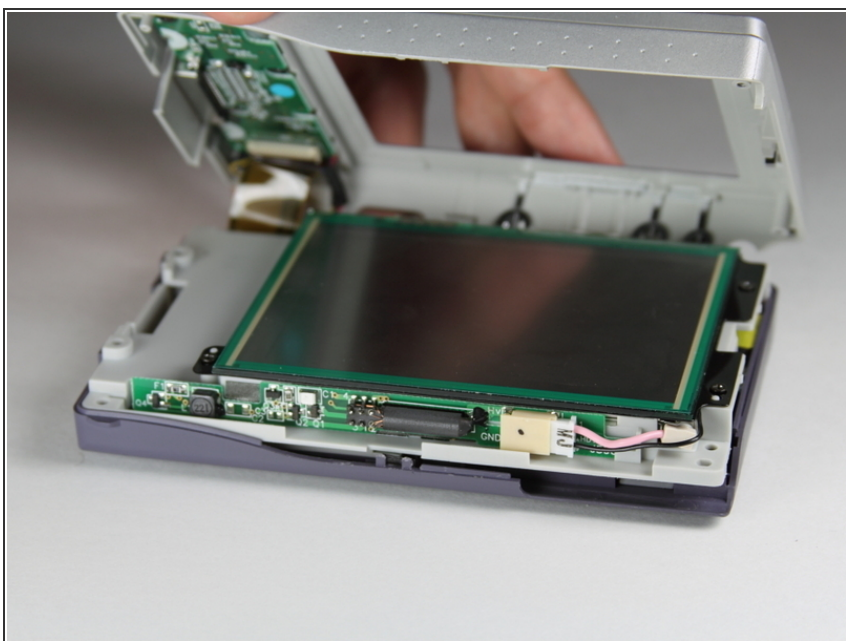

- Pry the two halves of the case apart with the small flat head screwdriver.


## Step 9

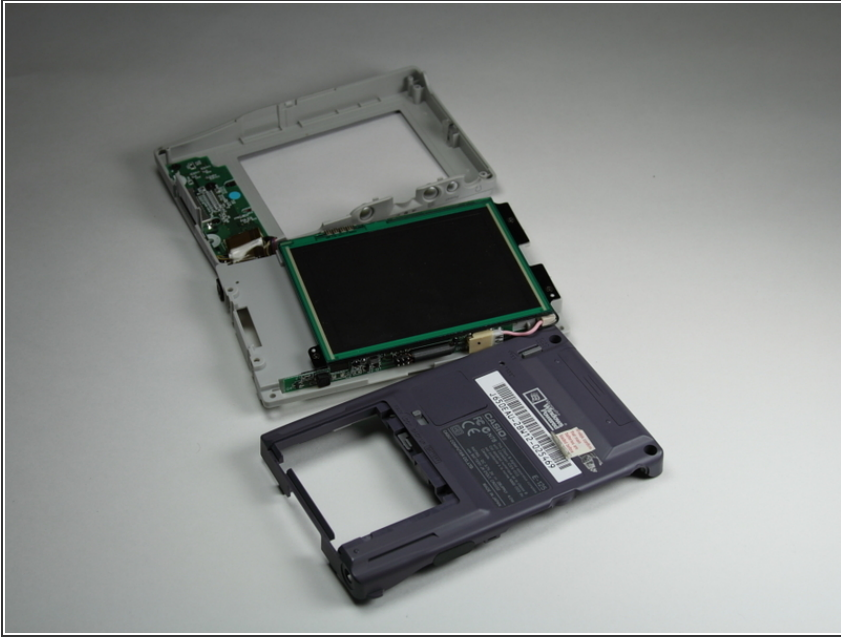

**⚠ Caution:** be careful not to pull out the wires connecting the two halves of the outer case. These wires are necessary for the device to be able to function.

- Lay the two halves of the outer case next to the central components as shown.



## Step 10

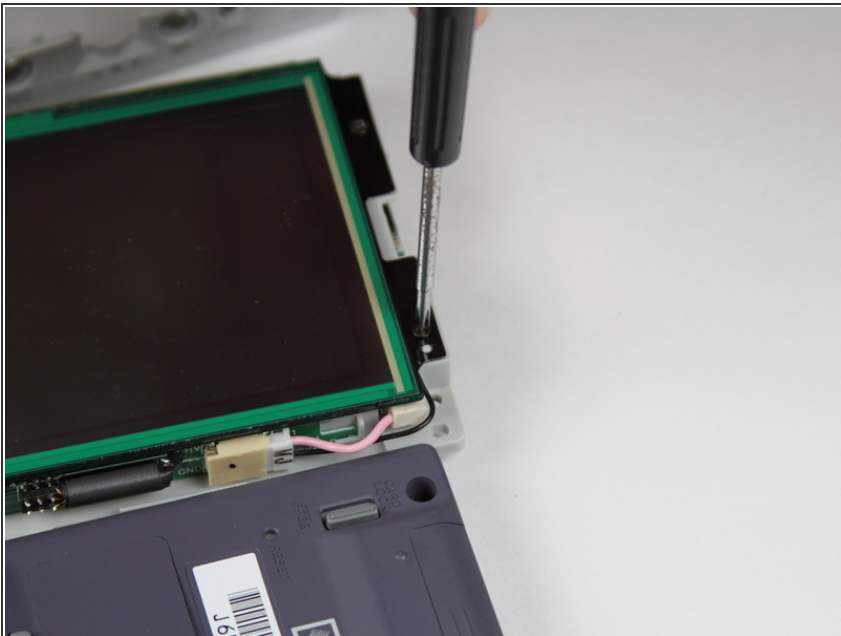

- Using the #00 Phillips screwdriver, remove the screws from the corners of the screen. There are 3 screws total.




## Step 11

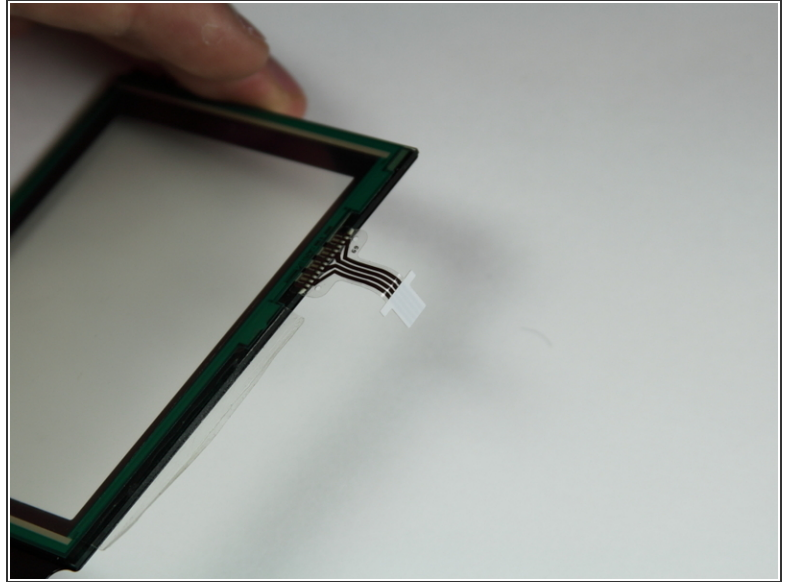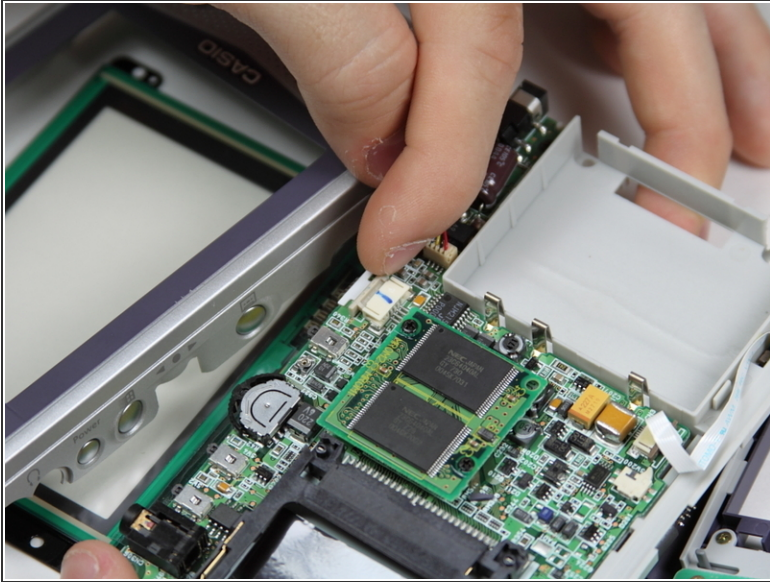

- Lift the tab on the motherboard and pull out the ribbon cable.
- After the ribbon cable is detached from the motherboard, the touch screen is completely separated from the device.


## Step 12 — Key Pad

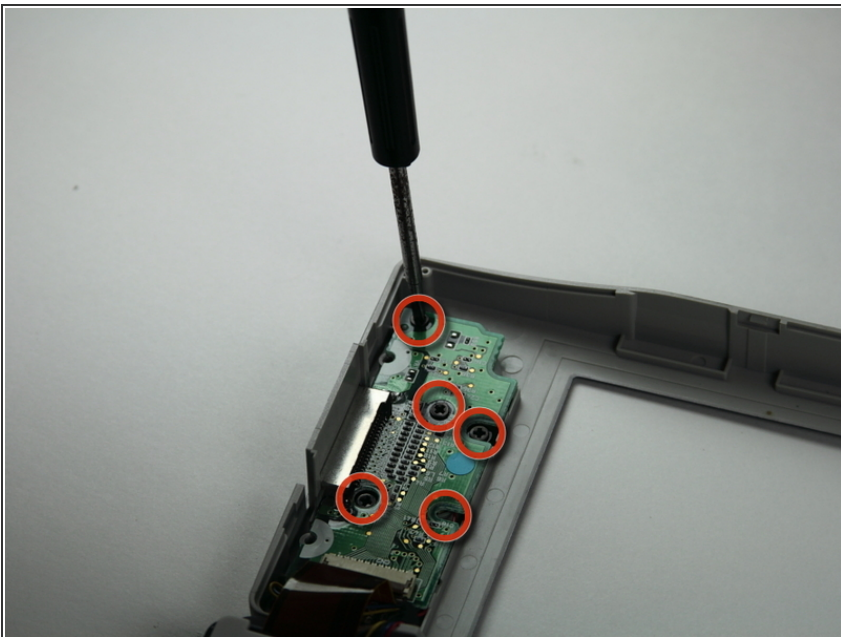

- Using the #00 Phillips screwdriver, remove the screws on the back of the front case. There are five total.




## Step 13

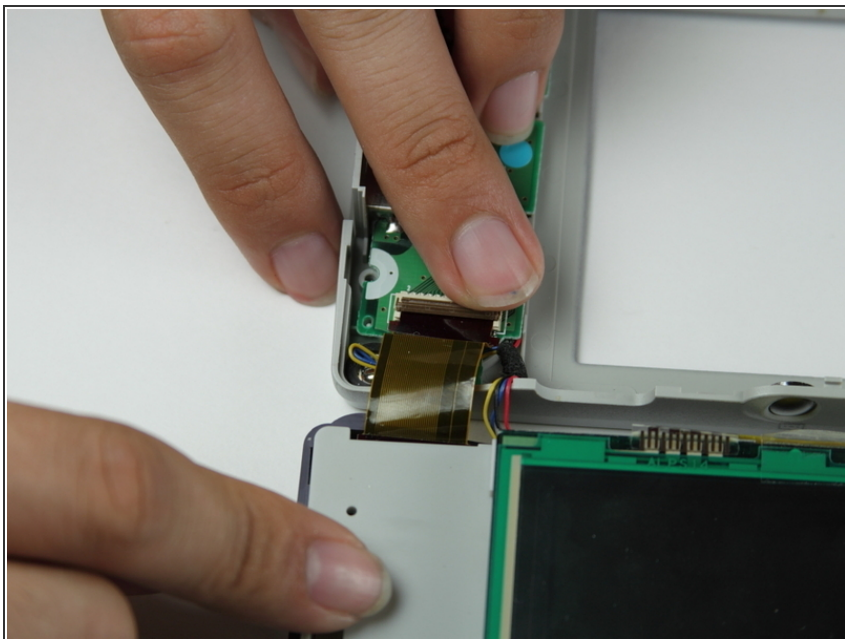

- Pull the ribbon cable out of its port on the back of the keypad.

## Step 14

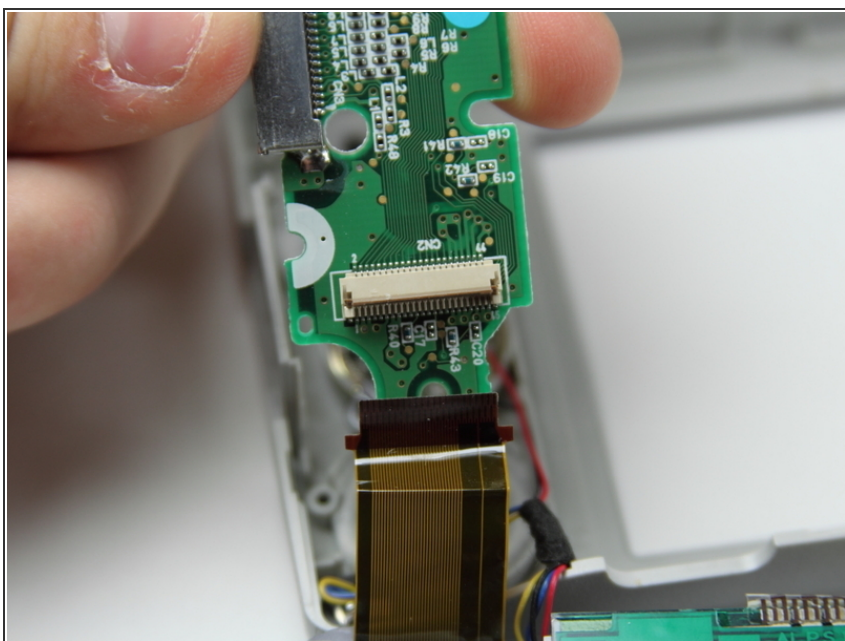

- The keypad can now be lifted off the front case.

To reassemble your device, follow these instructions in reverse order.